



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE Pro-Ject Dock Box S Fi

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO docking station Dock Box.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.




*Warning of a hazard for the user, the unit or possible misuse.*



*Important notice.*

## Connectors

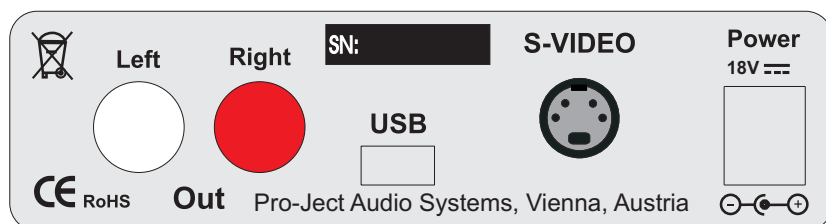

*Make all connections whilst the Dock Box is disconnected from the power supply.*



*Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.*

*Never use any other power supply than the one supplied with the unit.*

## Connection to the amplifier

Connect the **Left/Right Out** socket to a line input (such as **AUX**) on your amplifier.

## Connecting to a computer, iPod® operating system

Connect the USB-output of the Dock Box to a free USB-socket on your computer and switch it on.



*When the Dock Box is connected to a computer, all functions of the Dock Box are blocked.*

## Connection to a TV-set or a beamer

Connect the **S-VIDEO** socket to a s-video input of your TV-set or beamer.



*„All digital“ units do not support the s-video output.*

## Fitting and adjustment of the iPod® cradle

Use the knurled screw supplied to fix the cradle to the Dock Box chassis. Do not fully tighten the screw yet. Now place your iPod® on the Dock Box contacts. Move the cradle so that it supports the iPod® and tighten the screw.



*This device is suitable for iPods®/iPhones® with 30-pole connector only.*

*To connect units with a lightning-connector, such as iPod® Nano 7. generation or iPod® Touch 5, a lightning-adapter (lightning connector → 30-pole connector) is needed.*



*Use without the cradle will eventually break the 30-pole connector of the Dock Box and the socket of the iPod®. Before connecting the iPod®, any sort of cover has to be removed.*

## Mains power connection

Connect the low voltage plug from the power supply to the **Power 18V** socket before connecting the power supply to the mains.

## To switch on and off, charging the battery


The Dock Box is turned on and off with the supplied user remote. A blue LED on the front panel shows that the unit is switched on.

When the Dock Box is connected to the mains supply it will charge the docked iPod® (even in standby).

## Remote control



iPod® Touch and iPhone® must be unlocked and switched to music mode.  
The volume control of the apple® device has to be set to max..

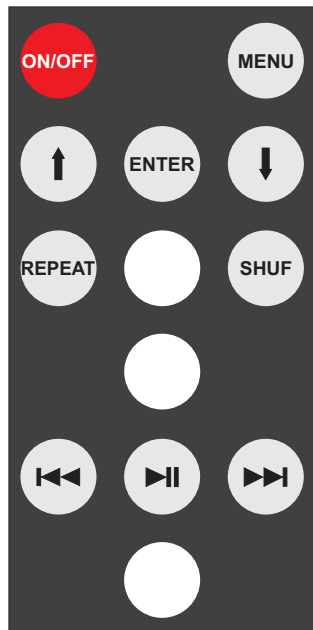

**Blanked out buttons do not carry a function !**

### To switch on from standby or to standby



turns the Dock Box off and the iPod® into standby.  
Switches the Dock Box on. Press any key (except **ON/OFF**) to turn on the iPod®.

### Start / Pause



starts and pauses playback

## Stepping between tracks, reverse and forward scanning



skips to the previous track.



skips to the next track



restarts the current track in playback mode

Press and hold the



button for reverse scanning, or the button



to start forward scanning.

## Repeat play



starts repeat play for the current track. Pressing the button again starts repeat play for all tracks.  
To deactivate repeat play press **REPEAT** once more.

## Shuffle play



activates and deactivates shuffle play

## Navigating the menu



shows the menu. Returns to the previous step in the menu



and



move the cursor up and down, to highlight the requested option.



selects or deselects the highlighted option. Shows the next step in the menu.

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Dock Box S Fi

Frequency response:	20Hz - 20kHz
Line-level output:	1 pair RCA/phono sockets
Output impedance:	15 ohms
Output voltage:	1Vrms
USB output:	5-pole mini-B jack (USB cable supplied)
USB signal:	digital serial data protocol USB 1.1
Operating systems:	Windows XP®, Windows VISTA®, Windows 7®, Windows 8®, Mac OS
Video output:	S-video socket
Outboard power supply:	18V/500mA DC, suitable for your country's mains supply
Power consumption:	300mA DC max.. Power consumption is not constant. It depends on the charging needs of the battery. <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 36 x 104 (109)mm - height plus height of iPod or iPhone
Weight:	585g without power supply

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.*

## Safety instructions



*AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply.*

*The power supply is used to disconnect the unit from the mains. Make sure that the power supply is easily accessible at all times. Never handle the device, the power supply while your hands are wet or damp.*

*Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply.*

*Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.*

## Copyright, trademarks

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH

Copyright © 2012. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

Windows XP®, Windows Vista®, Windows 7®, Windows 8® are trademarks of the Microsoft group of companies. iPod®, Mac® and Mac OS® are trademarks of Apple Inc., registered in the U.S. and other countries.